

**ASSEMBLY INSTRUCTIONS  
N GAS STATION  
65-139**


Micro Engineering, Inc.  
1120 Eagle Road  
Fenton, MO 63026

**TOOLS NEEDED:** X-Acto knife with #11 blade, woman's emery board, small file, and a #54 drill.

**CEMENT:** Plastic cement, Hot Stuff ACC or five-minute epoxy, and white glue.

**PAINTS:** Use Floquil for metal parts. Styrene parts may be sprayed with Floquil, but a barrier should be used if brushed, or use plastic paints. Acrylic artist colors may be purchased in most art stores. When we say "WASH" we mean a very diluted mixture with water.


**2**

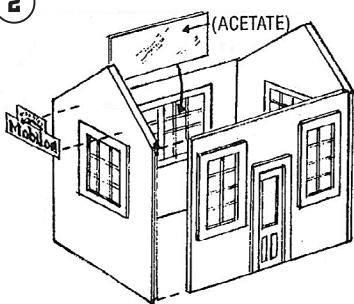

**Building**

1. Sand all edges with emery board.
2. Glue side walls in slots on end walls.
3. Spray building white. With brush paint doors, window frames and mullions Pullman Green.
4. Trim Gargoyle signs from sheet to shape shown in drawing and white glue to end walls over windows. Give entire station a light wash of black and raw umber acrylic wash.
5. If you want glass in windows, cut and fit acetate to recesses on inside walls. Acetate is not included with kit.


**3**

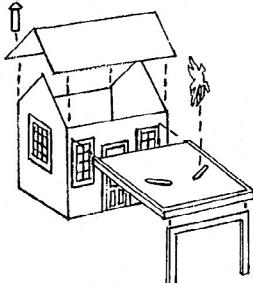

**Roofs**


1. Sand edges of roof with emery board to square up.
2. Drill #54 hole in plate at corner of station roof.
3. Glue horses to tabs on top of front roof. Glue roof support to tab on bottom side of front roof.
4. Bend station roof in center until it fits station. Spray both roofs Pullman Green. Glue stack in hole and paint black.
5. Glue roof to station. Glue front roof to the front wall resting on top of windows.
6. Paint roof support white, then give both roofs a wash of black acrylic . . . make blacker around stack.

**Suggested Layout**

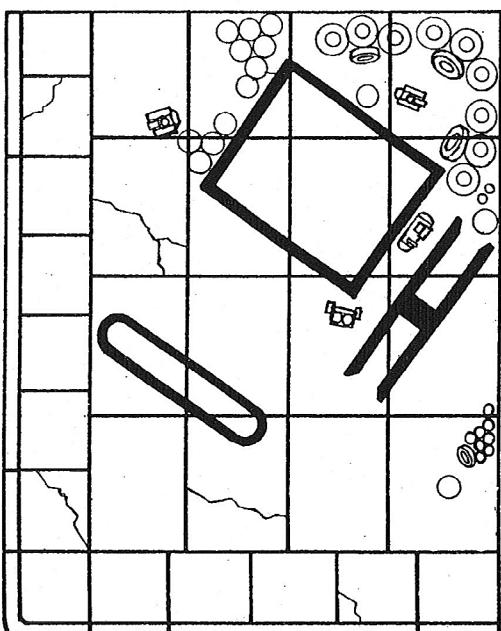


**4**

**Final Assembly**

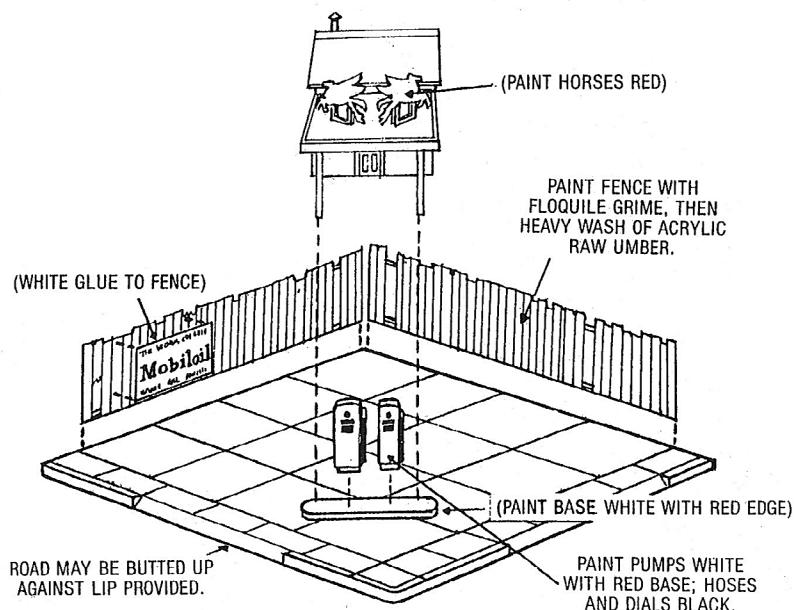

**1 Concrete & Sidewalks**

1. Clean up edges with emery board.
2. Glue pieces together edge-to-edge.
3. Cut "cracks" in pavement with #11 blade. SEE PLAN.
4. Rough up entire surface with circular motion of emery board.

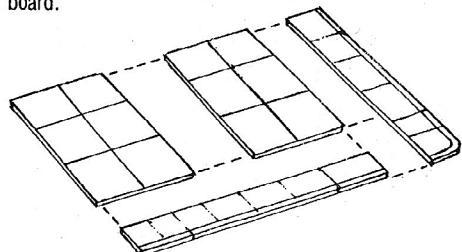

5. Paint surface with Floquil concrete. When dry give light wash with raw umber and black acrylic. Make dirty spots under car areas, etc.

**5 Tow Truck**

1. Clean all castings with a small file.
2. Fit all parts but do not glue yet. Paint frame and tires black.
3. Glue top hoist and bottom hoist to truck bed. Paint cab and bed desired color. Paint tire hubs. The windows look best painted a flat black.
4. Glue cab and bed to frame.

